


Fuse/Relay Boxes

- Main Under-hood Fuse/Relay Box

Fuse-to-Components Index

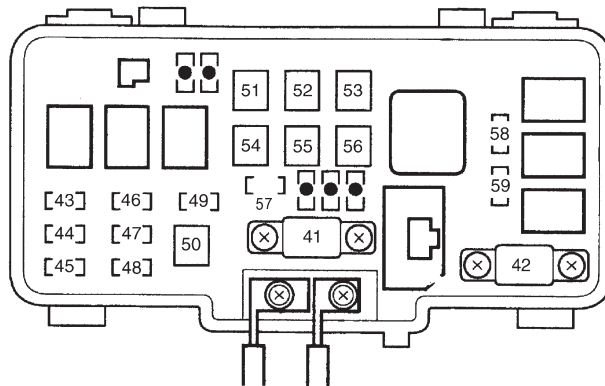

Fuse Number	Fuse Name	Amps	Page	Component or Circuit Protected
41	BATTERY	100	10	Battery, Power distribution
42	IGI MAIN	40	10-3	Ignition switch (BAT)
43	R HEADLIGHT	20	10-11 or 10-12	DRL control unit (Canada), Right headlight (USA: high beam), Right headlight (low beam)
44	—	—	—	Not used
45	L HEADLIGHT	20	10-11 or 10-12	DRL control unit (Canada), DRL diode (Canada), Gauge assembly, High beam indicator light, Left headlight (USA: high beam), Left headlight (low beam)
46	ACG S	15	10	DLC, PGM-FI main relay
47	STOP	10 (00-01) 15	10-2	Brake pedal position switch, Horn relay
48	ABS F/S	20	10-2	ABS modulator-control unit
49	HAZARD	10	10-2	Hazard warning switch
50	ABS MOTOR	30	10-2	ABS modulator-control unit
51	P/W MOTOR	40	10-1	No. 17 and 18 fuses (in the under-dash fuse/relay box)
52	SOFT TOP MOTOR R	20	10	Convertible top control unit
53	—	—	—	Not used
54	BACK-UP, ACC	30	10-1	No. 22, 23, 24, 25, 26 and 27 fuses (in the under-dash fuse/relay box)
55	SOFT TOP MOTOR L	20	10	Convertible top control unit
56	HEATER MOTOR	40	10-1	Blower motor relay
57	COOLING FAN	20	10-1	Radiator fan relay
58	CONDENSER FAN	20	10-1	A/C condenser fan relay A/C compressor clutch relay
59	—	—	—	Not used