




Fuse/Relay Boxes

- Main Under-hood Fuse/Relay Box

Connector-to-Fuse/Relay Box Index

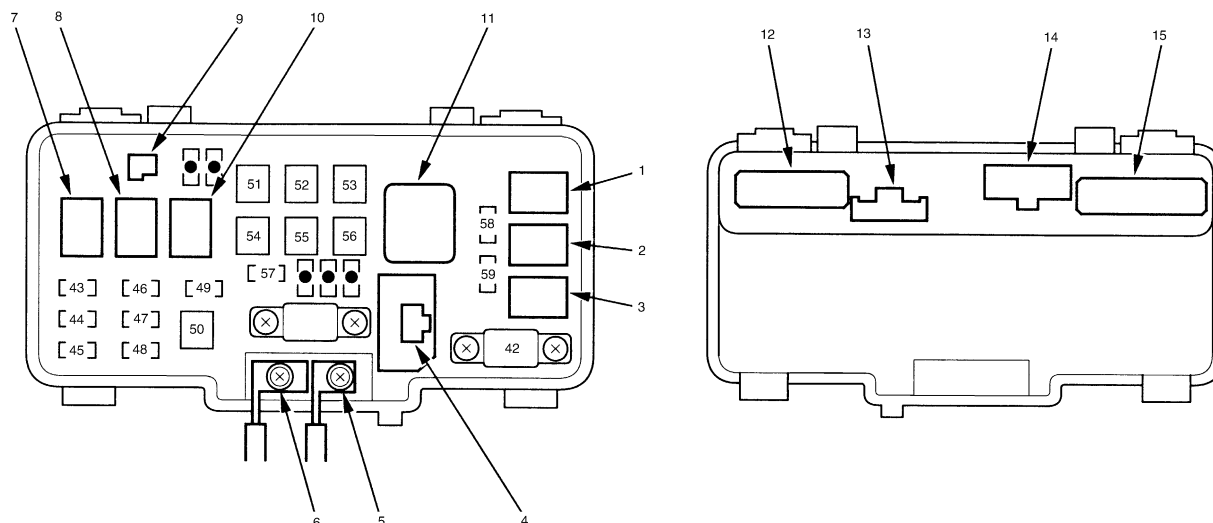

Ref	Socket	Cavities	Connects to
1	A/C condenser fan relay	4	Right-side engine compartment wire harness (see page 203-4)
2	Radiator fan relay	4	
3	A/C compressor clutch relay	4	
4	ELD Unit	3	
5	T101		Engine wire harness (see page 203-2)
6	T1		EPS sub-harness (see page 203)
7	Headlight relay 1	4	Right-side engine compartment wire harness (see page 203-4)
8	Headlight relay 2	4	
9	Diode	2	
10	Horn relay	4	
11	Blower motor relay	4	Right-side engine compartment wire harness (see page 203-4)
12	Connector D	16	
13	Connector C	3	
14	Connector B	7	
15	Connector A	18	Right-side engine compartment wire harness (see page 203-4)