




# Fuse/Relay Boxes

## - Under-dash Fuse/Relay Box

### Connector-to-Fuse/Relay Box Index

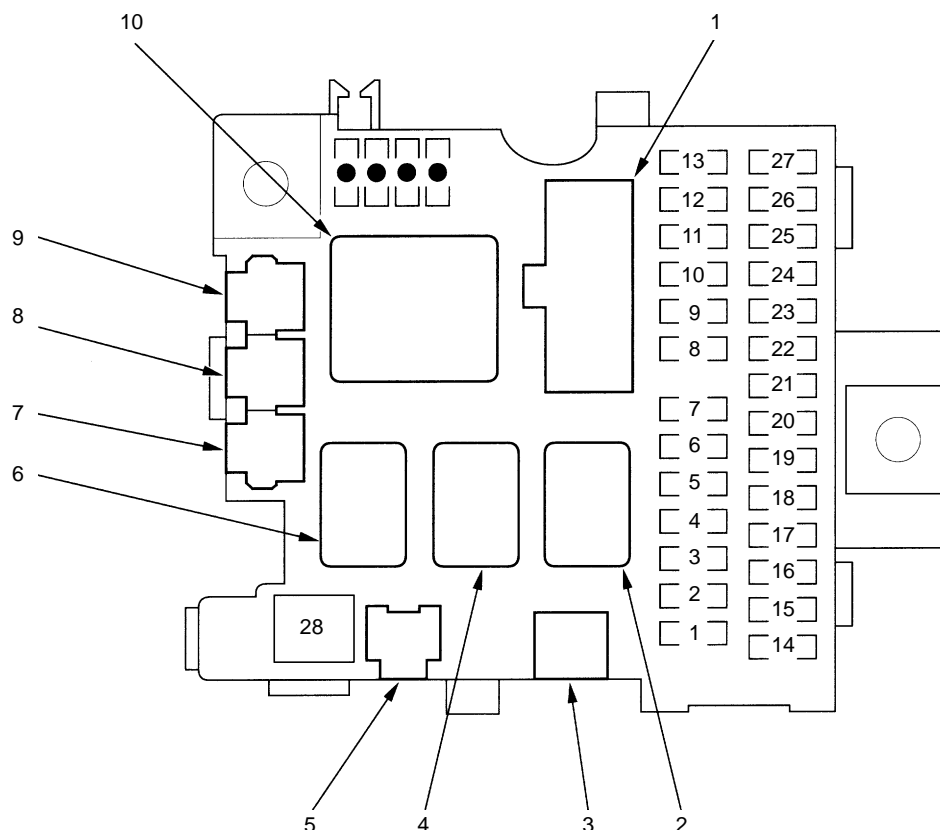

Ref	Socket	Cavities	Connects to
1	Connector B	7	Ignition switch lead (see page <a href="#">203-17</a> )
2	Taillight relay	5	
3	Connector A	2	SRS main wire harness (see page <a href="#">203-17</a> )
4	Starter cut relay	5	
5	MES connector	2	SRS main wire harness (see page <a href="#">203-17</a> )
6	Rear window defogger relay ('00-'01)	5	Option (Removable Hardtop) (see page <a href="#">203-20</a> )
7	Connector C	1	Optional connector (IG2 Relay: see page <a href="#">10-4</a> )
8	Connector D	1	Optional connector (B+ Fuse 42: see page <a href="#">10-3</a> )
9	Connector E	1	Optional connector (Dash lights Circuit 11: see page <a href="#">15</a> )
10	Turn signal/hazard relay	3	