


# Fuse/Relay Boxes

## - Auxiliary Under-hood Fuse Box

### Fuse-to-Components Index

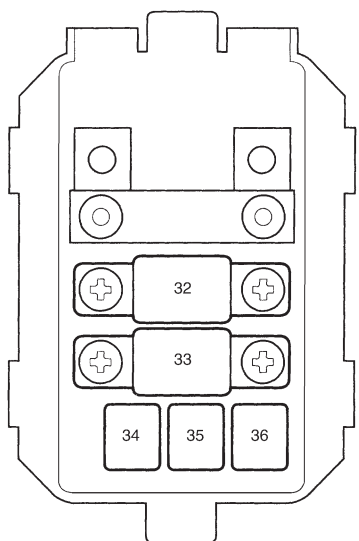

Fuse Number	Fuse Name	Amps	Page	Component or Circuit Protected
32	AIR PUMP	60	10	Air pump electrical current sensor
33	EPS	70	10	EPS control unit
34 ('00-'01)	(RR DEF)	20	10	Option (Removable Hardtop)
34 ('02-'05)	RR DEF	20	10	Rear window defogger
35	—	—	—	Not used
36	—	—	—	Not used