




# Fuse/Relay Boxes

## - Auxiliary Under-hood Fuse Box

### Connector-to-Fuse/Relay Box Index

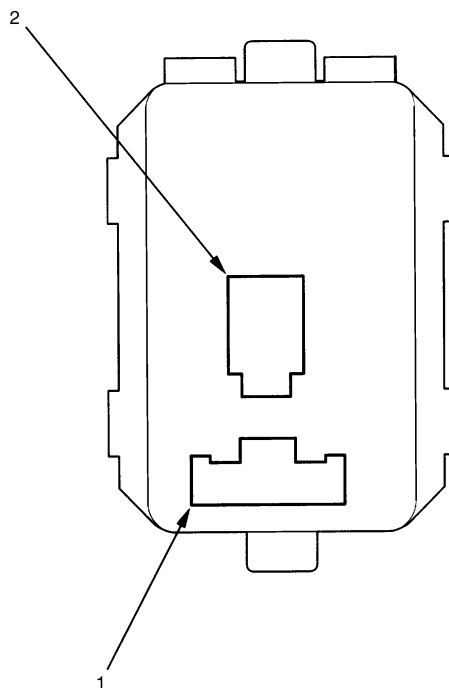

Ref	Socket	Cavities	Connects to
1	Connector B	3	Left-side engine compartment wire harness (see page <a href="#">203-6</a> )
2	Connector A	2	Left-side engine compartment wire harness (see page <a href="#">203-6</a> )