

Power Distribution

– Under-dash Fuse/Relay Box – Fuse 20

NOTE: See page 10-4 for details.

