




Connector Terminal Views

4. Knock Sensor

- Black
- Lower left side of engine
- On engine wire harness

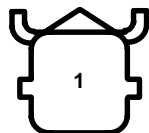

1 RED/BLU (Sensor output)