



Connector Terminal Views

128. DLC

- Gray
- Under right middle of dash ('00-'01)
- Under left middle of dash ('02-'05)
- On dashboard wire harness B (right branch)

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16

- 1 (9) —
- 2 (10) —
- 3 (11) —
- 4 (12) BLK (G401) (Ground for PGM Tester)
- 5 (13) BRN (G101) (Signal ground for communication network)
- 6 (14) —
- 7 (15) GRY (DLC and MIL circuits) (K line for off-board communication)
- 8 (16) —
- 9 (1) BRN (Circuit F28)
- 10 (2) —
- 11 (3) —
- 12 (4) —
- 13 (5) —
- 14 (6) LT BLU (Circuit F54 – ABS/SRS input/output)
- 15 (7) —
- 16 (8) WHT/GRN (Fuse 46) (Power for PGM Tester (B+, 4 amps max))

() = Non-SAE terminal number used in service manual.

NOTE: Data Link Connector (DLC) terminals are numbered according to SAE standard J1962, not the Honda standard. The numbers of the four end terminals are molded into the corners of the connector face.

This view of the DLC is the same as if you were looking at it installed in the vehicle.