




Connector Terminal Views

145. Air Pump Electrical Current Sensor


- Gray
- Behind left front wheel well
- On left-side engine compartment wire harness

Connector A

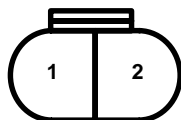

- 1 WHT (Fuse 32)
- 2 WHT/RED (Air pump motor power supply)

 Connector B



- 1 YEL/BLU (Circuit D46 – reference voltage (VCC2))
- 2 GRN (Circuit Z28 – sensor ground (SG2))
- 3 WHT/BLK (Sensor output (ECS))