



Connector Terminal Views

152. Gauge Assembly

- Behind gauge assembly
- On dashboard wire harness A

Connector A

- Green

'00-'03:

1	2	3			4	5	6
7	8	9	10	11	12	13	14

- 1 BLU/RED (Seat belt reminder)
- 2 —
- 3 —
- 4 PNK (SRS indicator circuit)
- 5 Canada: BLU/WHT (DRL indicator)
- 6 Canada: YEL (Fuse 5)
- 7 GRN/RED (Left turn signal indicator (+))
- 8 GRN/YEL (Right turn signal indicator (+))
- 9 Canada: RED/WHT (High beam indicator (+))
USA: RED/YEL (Fuse 45)
- 10 RED/BLU
USA: (High beam indicator (-))
Canada: (High beam indicator (-))
- 11 BLU/BLK (Trunk indicator (-))
- 12 —
- 13 —
- 14 YEL/BLU (EPS indicator (-))

'04-'05:

1	2	3	4	5			6	7	8	9	10
11	12	13	14	15	16	17	18	19	20	21	22

- 1 Canada: YEL (Fuse 5)
- 2 Canada: BLU/WHT (DRL indicator)
- 3 WHT/RED (Fuse 25)
- 4 PNK (Immobilizer indicator (-))
- 5 BLK/WHT (Door open output (-))
- 6 —
- 7 RED/YEL (Fuse 45)
- 8 RED/BLK (Circuit 11 – dash and console lights (+))
- 9 YEL (Fuse 5)
- 10 WHT/RED (Fuse 25)
- 11 —
- 12 BLU/BLK (Trunk indicator (-))
- 13 LT GRN/RED (Passenger's door switch input (-))
- 14 GRN (Driver's door switch input (-))
- 15 Canada: RED/WHT (High beam indicator (+))
USA: RED/YEL (Fuse 45)
- 16 RED/BLU
USA: (High beam indicator (-))
Canada: (High beam indicator (-))
- 17 BLK (G501)
- 18 BLK (G501)
- 19 RED (Circuit 12 – dash and console lights (-))
- 20 BLK/YEL (Security indicator (-))
- 21 —
- 22 —



Connector Terminal Views


152. Gauge Assembly

- Behind gauge assembly
- On dashboard wire harness A

Connector B

'00-'03:

- Gray

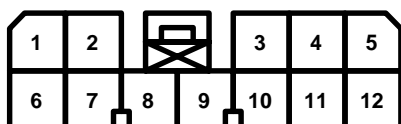

- 1 BLK/WHT (Door open output (-))
- 2 RED/YEL
USA: (Fuse 45)
Canada: (Fuse 45)
- 3 RED/BLK (Circuit 11 – dash and console lights (+))
- 4 YEL (Fuse 5)
- 5 WHT/RED (Fuse 25)
- 6 GRN (Driver's door switch input (-))
- 7 LT GRN/RED (Passenger's door switch input (-))
- 8 BLK (G501)
- 9 BLK (G501)
- 10 RED (Circuit 12 – dash and console lights (-))
- 11 GRN
- '00-'01: (Intermittent wiper relay driver output (-))
- '02-'03: (Intermittent wiper relay driver output (-))
- 12 —

'04-'05:

- Green



- 1 —
- 2 BLU/YEL (Cruise control indicator (-))
- 3 BLU (Tachometer signal output)
- 4 BLU/RED (Seat belt reminder)
- 5 YEL/GRN (Engine coolant temperature input)
- 6 RED/WHT (Ignition key switch input (-))
- 7 BLU/WHT (Vehicle speed signal input (-))
- 8 WHT/BLK (Vehicle speed pulse output)
- 9 BLK/WHT (Heater control panel illumination cancel output)
- 10 YEL/BLK (Fuel gauge signal input)
- 11 —
- 12 GRN (Intermittent wiper relay driver output (-))
- 13 YEL/BLU (Defogger)
- 14 —
- 15 BLK/YEL (Rear defogger)
- 16 BLU/ORN (Circuit 402 – wiper position input)
- 17 BLU/BLK (Intermittent wiper request input)
- 18 WHT/BLK (Washer request input)
- 19 PNK (SRS indicator circuit)
- 20 BLU/RED (ABS indicator circuit input)
- 21 YEL/BLU (EPS indicator (-))
- 22 —
- 23 GRN/WHT (Parking brake switch input (-))
- 24 GRN/RED (Brake system indicator input (-))
- 25 —
- 26 WHT/BLU (Charging system indicator (-))
- 27 YEL/RED (Engine oil pressure switch input (-))
- 28 GRN/ORN (Malfunction indicator light (-))
- 29 GRN/RED (Left turn signal indicator (+))
- 30 GRN/YEL (Right turn signal indicator (+))


Connector Terminal Views

152. Gauge Assembly

- Behind gauge assembly
- On dashboard wire harness A

Connector C ('00-'03)


- Black

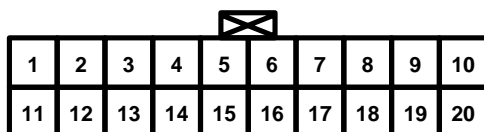

- 1 WHT/BLK (Vehicle speed pulse output)
- 2 RED/WHT (Ignition key switch input (-))
- 3 BLU/WHT (Vehicle speed signal input (-))
- 4 —
- 5 BLU (Tachometer signal output)
- 6 BLK/WHT (Heater control panel illumination cancel output)
- 7 YEL/GRN (Engine coolant temperature input)
- 8 YEL/BLK (Fuel gauge signal input)
- 9 —
- 10 '02-'03: YEL/BLU (Defogger)
- 11 BLU/ORN (Circuit 402 – wiper position input)
- 12 BLU/BLK
'00-'01: (Intermittent wiper request input)
'02-'03: (Intermittent wiper request input)
- 13 WHT/BLK
'00-'01: (Washer request input)
'02-'03: (Washer request input)
- 14 —
- 15 BLU/YEL (Cruise control indicator (-))
- 16 —
- 17 —
- 18 —
- 19 —
- 20 —

Connector D ('00-'03)

- Black

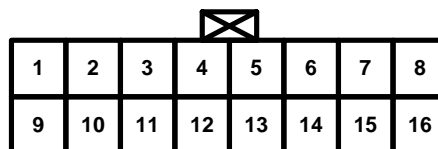

- 1 —
- 2 —
- 3 —
- 4 —
- 5 '02-'03: BLK/YEL (Defogger)
- 6 —
- 7 —
- 8 BLU/RED (ABS indicator circuit input)
- 9 GRN/WHT (Parking brake switch input (-))
- 10 GRN/RED (Brake system indicator input (-))
- 11 WHT/BLU (Charging system indicator (-))
- 12 BLK/YEL (Fuse 6)
- 13 YEL/RED (Engine oil pressure switch input (-))
- 14 GRN/ORN (Malfunction indicator light (-))
- 15 PNK (Immobilizer indicator (-))
- 16 WHT/RED (Fuse 25)