

# Connector to Harness Index

## EPS Sub-harness

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
1	T1	2-GRY	Right rear of engine compartment	Main under-hood fuse/relay box (see page 6-1)	
2	EPS control unit connector C		Right rear of engine compartment	Body ground via EPS sub-harness	
3	G351		Right rear of engine compartment		
7	T6	2-GRY	Left rear of engine compartment	Auxiliary under-hood fuse box	
8	C351		Left rear of engine compartment	Left-side engine compartment wire harness (see page 203-6)	
	⊕		Right rear of engine compartment	Battery positive terminal	

## Battery Ground Cable

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
4	G1		Right rear of engine compartment	Body ground via battery ground cable	
	⊖		Right rear of engine compartment	Battery negative terminal	

## Starter Cable

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
5	G3		Left rear of engine compartment	Body ground via starter cable	
6	T7		Left rear of engine compartment	Auxiliary under-hood fuse box	
9	T2		Lower left side of engine	Starter motor	
11	T3		Lower left side of engine	Engine block	

## Engine Ground Cable

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
10	T5		Lower left side of engine	Engine block	
12	G2		Lower left side of engine	Rear beam ground via engine ground cable	

## EPS Gearbox Ground Cable

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
13	T4		Engine compartment (below front beam)	EPS gearbox	
14	G4		Engine compartment (below front beam)	Front beam ground via EPS gearbox ground cable	



# Connector to Harness Index

