

Connector to Harness Index

Engine Wire Harness

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
1	T101		Right rear of engine compartment	Main under-hood fuse/relay box (see page 6-1)	
2	VTEC oil pressure switch	2-GRY	Right side of engine compartment		
3	Ignition coil No. 1	3-BLK	Top of engine		
4	Ignition coil No. 2	3-BLK	Top of engine		
5	Ignition coil No. 3	3-BLK	Top of engine		
6	CMP sensor B	2-BLK	Rear of engine compartment		
7	Ignition coil No. 4	3-BLK	Top of engine		
8	G101		Rear side of engine		
9	Primary HO2S	4-GRY	Upper left side of transmission	Engine ground via engine wire harness	
10	Back-up light switch	2-GRY	Upper left side of transmission		
11	Secondary HO2S	4-GRY	Left side of transmission		
12	VSS	3-BLK	Left side of transmission		
13	CMP sensor A	2-BLK	Rear of engine compartment		
14	C101	16-LT BLU	Behind left kick panel		
15	ECM connector B	25-GRY	Behind left kick panel		
16	ECM connector C	31-BLU	Behind left kick panel		
17	C103 (test connector)	2-GRY	Behind left kick panel	Dashboard wire harness A (see page 203-12)	
18	C102 (junction connector)	20-BLU	Behind left kick panel		
19	IAC valve	3-GRY	Left side of engine		
20	IAT sensor	2-GRY	Left rear side of engine		
21	Injector No. 4	2-BLK	Top of engine		
22	Starter solenoid	1-GRY	Lower left side of engine		
23	MAP sensor	3-GRY	Left front side of engine		
24	A/C compressor	1-GRY	Lower left side of engine		
25	Alternator	4-LT GRN	Left front of engine	Alternator	
26	T102		Left front of engine		
27	Knock sensor	1-BLK	Lower left side of engine		
28	TP sensor	3-GRY	Left front side of engine		
29	Injector No. 2	2-BLK	Top of engine		
30	CKP sensor	3-GRY	Left front side of engine		
31	Injector No. 1	2-BLK	Top of engine		
32	Injector No. 3	2-BLK	Top of engine		
33	ECT sensor	2-GRY	Rear of engine compartment		
34	T103		Right side of engine		
35	VTEC solenoid valve	1-GRY	Right side of engine compartment		



Connector to Harness Index

