

Connector to Harness Index

Right-side Engine Compartment Wire Harness

| Ref | Connector or Terminal | Cavities/ Color | Location | Connects to | Notes |
|-----|---------------------------------------|--------------------|---------------------------------------|--|-------------------------------|
| 1 | A/C condenser fan motor | 2-GRY | Left front of engine compartment | Body ground via right-side engine compartment wire harness | '00-'01 '02-'05 |
| 2 | EPS torque sensor | 3-GRY | Engine compartment (below front beam) | | |
| 3 | EPS motor | 2-GRY | Engine compartment (below front beam) | | |
| 4 | A/C pressure switch | 2-GRY | Behind center of front bumper | | |
| 5 | Horn | 1-BLK | Behind center of front bumper | | |
| 6 | Low horn | 1-BLK | Behind center of front bumper | | |
| 7 | Radiator fan motor | 2-GRY | Right front of engine compartment | Under-hood fuse/relay box | '00-'03 '04-'05 '02-'05 |
| 8 | G201 | | Right front of engine compartment | | |
| 9 | Right headlight, high beam | 3-BLK | Behind right headlight | | |
| 10 | Right headlight, low beam | 2-GRY | Behind right headlight | | |
| 11 | Right front wheel speed sensor | 2-ORN | Right front of engine compartment | | |
| 12 | Right front parking light | 2-BRN/ NAT | Behind right headlight | | |
| 13 | Right front parking/side marker light | 2-BRN/ NAT | Behind right headlight | Dashboard wire harness A (see page 203-12) Dashboard wire harness B (right branch) (see page 203-10) Dashboard wire harness B (right branch) (see page 203-10) Dashboard wire harness B (right branch) (see page 203-10) | |
| 14 | Right front turn signal light | 2-GRY | Behind right headlight | | |
| 15 | High horn | 1-BLK | Right side of engine compartment | | |
| 16 | ELD unit (see page 6-1) | 3-GRY | Right rear of engine compartment | | |
| 17 | EPS control unit connector A | 2-GRY | Right rear of engine compartment | | |
| 18 | Windshield washer motor | 2-BRN/ NAT | Behind right front wheel well | | |
| 19 | EPS control unit connector B | 14-GRY | Right rear of engine compartment | Main under-hood fuse/relay box connector D (see page 6-1) Main under-hood fuse/relay box connector C (see page 6-1) Main under-hood fuse/relay box connector B (see page 6-1) Main under-hood fuse/relay box connector A (see page 6-1) | |
| 20 | Right side turn signal light | 2-BRN/ NAT | Behind right fender | | |
| 21 | C204 | 18-GRY | Under right side of dash | | |
| 22 | C203 | 7-BRN | Under right side of dash | | |
| 23 | C201 | 16-LT BLU | Under right side of dash | | |
| 24 | C202 | 6-LT BLU | Under right side of dash | | |
| 25 | | 16-LT GRN | Right rear of engine compartment | | |
| 26 | | 3-BRN | Right rear of engine compartment | | |
| 27 | | 7-BRN | Right rear of engine compartment | | |
| 28 | | 18-LT GRN | Right rear of engine compartment | | |



Connector to Harness Index

