

Connector to Harness Index

Left-side Engine Compartment Wire Harness

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
1	Radiator fan switch	2-GRY	Lower left front of engine compartment	Body ground via left-side engine compartment wire harness	
2	G301		Left front of engine compartment		
3	G302		Behind left side front bumper		
4	Air pump relay connector B	2-GRY	Behind left side of front bumper	Body ground via left-side engine compartment wire harness	
5	Air pump	2-GRY	Behind left side of front bumper		
6	Left headlight, high beam	3-BLK	Behind left headlight		
7	Air pump relay connector A	2-GRY	Behind left side of front bumper		'00-'03
8	Left headlight, low beam	2-GRY	Behind left headlight		
9	Left front parking light	2-BRN/ NAT	Behind left headlight		
9	Left front parking/side marker light	2-BRN/ NAT	Behind left headlight		'04-'05
10	Left front wheel speed sensor	2-ORN	Left front of engine compartment	Auxiliary under-hood fuse box	
11	Left front turn signal light	2-GRY	Behind left headlight		
12	Auxiliary under-hood fuse box connector B (see page 6-7)	3-BRN	Left rear of engine compartment		
13	G303		Left rear of engine compartment	Body ground via left-side engine compartment wire harness	
14	Air pump electrical current sensor connector A	2-GRY	Behind left front wheel well		
15	Air pump electrical current sensor connector B	3-GRY	Behind left front wheel well		
16	Left side turn signal light	2-BRN/ NAT	Behind left fender		
17	Intermittent wiper relay	6-BRN/ NAT	Left side of engine compartment		'02-'05
18	Test tachometer connector	2-NAT	Left rear of engine compartment		
19	Brake fluid level switch	2-GRY	Left rear of engine compartment		
20	C301	14-GRY	Under left side of dash	Dashboard wire harness B (left branch) (see page 203-8)	
21	C303	14-GRY	Left side of steering column	Dashboard wire harness A (see page 203-12)	
22	C302	16- LT BLU	Under left side of dash	Dashboard wire harness B (left branch) (see page 203-8)	
23	Windshield wiper motor	5-GRY	Below cowl cover	Auxiliary under-hood fuse box	
24	Auxiliary under-hood fuse box connector A (see page 6-7)	2-BLK/ BRN	Left rear of engine compartment		
25	C351	2-GRY	Left rear of engine compartment		
26	ABS modulator-control unit	25-BLK/ ORN	Left rear of engine compartment	EPS sub-harness (see page 203)	
27	EVAP canister purge valve	2-BLK	Left side of engine compartment		
28	Cruise control actuator	4-BLK	Left front of engine compartment		
29	Air control solenoid valve	2-GRY	Left side of engine compartment		



Connector to Harness Index

Left-side Engine
Compartment
Wire Harness

