



# Connector to Harness Index

## SRS Main Wire Harness

Ref	Connector or Terminal	Cavities/Color	Location	Connects to	Notes
1	MES connector (see page 6-5)	2-YEL	Under left side of dash	Dashboard wire harness A (see page 203-12)	
2	Under-dash fuse/relay box connector A (see page 6-5)	2-YEL	Under left side of dash		
4	C503	3-YEL	Left side of steering column		
5	Cable reel connector A	2-YEL	Under left side of dash		
6	SRS unit	18-YEL	Behind lower center of dash	Body ground via SRS main wire harness	
7	Passenger's airbag inflator	2-YEL	Under right side of dash		
8	Passenger's seat belt tensioner	2-YEL	Behind right side roll bar upper trim		
9	Driver's seat belt tensioner	2-YEL	Behind left side roll bar upper trim		
10	G801	2-YEL	Behind lower center of dash		

## Ignition Switch Lead

Ref	Connector or Terminal	Cavities/Color	Location	Connects to	Notes
3	Under-dash fuse/relay box connector B (see page 6-5)	7-BRN	Under left side of dash		

