

Circuit Index

- ABS (Anti-lock brake system) 44
- Accessory power socket 155
- Air conditioner – see HVAC
- Audio system 150
 - CD changer (Honda Accessory) 150
 - Headrest speakers system (Honda Accessory) ('04-'05) 150
 - XM radio (Honda Accessory) (USA: '04-'05) 150
- Back-up lights 110
- Brake lights
 - '00-'03 110
 - '04-'05 110
- Ceiling lights
 - '00-'03 114
 - '04-'05 114
- Charging system 22
- Condenser fan 63
- Console lights
 - '00-'03 114
 - '04-'05 114
- Convertible top 121
- Cruise control
 - '00-'03 34
 - '04-'05 34
- Dash lights
 - '00-'03 114
 - '04-'05 114
- Door indicator
 - '00-'03 80
 - '04-'05 80
- DRL (Daytime running lights) (Canada) 110
- Engine coolant temperature gauge
 - '00-'03 80
 - '04-'05 80
- EPS (Electrical power steering) 45
- Exterior lights
 - Back-up lights 110
 - Brake lights
 - '00-'03 110
 - '04-'05 110
 - DRL (Daytime running lights) (Canada) 110
 - Hazards warning lights 110
 - Headlights
 - Canada 110
 - USA 110
 - License plate lights
 - '00-'03 110
 - '04-'05 110
 - Parking lights
 - '00-'03 110
 - '04-'05 110
 - Side marker lights
 - '00-'03 110
 - '04-'05 110
 - Taillights
 - '00-'03 110
 - '04-'05 110
 - Turn signal lights 110
- Fans 63
- Fuel and emissions
 - DLC and MIL circuits 23
 - ECM power and ground 23
 - EVAP system 23
 - Fuel supply system 23
 - Idle control system 23
 - PGM-FI system 23
 - Pulsed secondary air injection system 23
- Fuel gauge
 - '00-'03 80
 - '04-'05 80
- Fuse Box
 - Auxiliary under-hood 6
- Fuse/relay box
 - Main under-hood fuse/relay box 6
 - Under-dash fuse/relay box 6
- Gauges
 - '00-'03 80
 - '04-'05 80
- Ground distribution index
- Ground-to-components index 6
- Hazard warning lights 110
- Headlights
 - Canada 110
 - USA 110
- Heater – see HVAC
- Horn 40
- HVAC 60
- Ignition system 20
- Immobilizer system 132
- Indicators
 - '00-'03 80
 - '04-'05 80
- Interior lights
 - Ceiling lights
 - '00-'03 114
 - '04-'05 114
 - Console lights
 - '00-'03 114
 - '04-'05 114
 - Dash lights
 - '00-'03 114
 - '04-'05 114
 - Spotlights
 - '00-'03 114
 - '04-'05 114
 - Trunk lights
 - '00-'03 114
 - '04-'05 114
- Key-in reminder
 - '00-'03 73
 - '04-'05 73
- Keyless
 - '00-'03 130
 - '04-'05 130
- License plate lights
 - '00-'03 110
 - '04-'05 110
- Lights-on reminder
 - '00-'03 73
 - '04-'05 73
- Low oil pressure indicator
 - '00-'03 80
 - '04-'05 80
- Low fuel indicator
 - '00-'03 80
 - '04-'05 80
- Odometer
 - '00-'03 80
 - '04-'05 80
- Parking lights
 - '00-'03 110
 - '04-'05 110
- PGM-FI – see Fuel and emissions
- Power distribution
 - Auxiliary under-hood
 - Main under-hood fuse/relay box
 - Under-dash fuse/relay box
- Power door locks
 - '00-'03 130
 - '04-'05 130
- Power mirrors 141
- Power windows 120
- Radiator fan 63
- Rear window defogger
 - '00-'01 64
 - '02-'05 64
- Seat belt reminder
 - '00-'03 73
 - '04-'05 73
- Security alarm system
 - Honda Accessory ('00-'03) 133
 - Honda Accessory ('04-'05) 133
- Side marker lights
 - '00-'03 110
 - '04-'05 110
- Speedometer
 - '00-'03 80
 - '04-'05 80
- Splice and junction connector details index
- Spotlights
 - '00-'03 114
 - '04-'05 114
- SRS (Supplemental restraint system) 47
- Starting system 21
- Tachometer
 - '00-'03 80
 - '04-'05 80
- Taillights
 - '00-'03 110
 - '04-'05 110
- Trunk indicator
 - '00-'03 80
 - '04-'05 80
- Trunk lid opener 134
- Trunk lights
 - '00-'03 114
 - '04-'05 114
- Turn signal lights 110
- VTEC control system 31
- Wiper/washer
 - '00-'01 91
 - '02-'05 91