 


Connector Views

– Component Connector View Index

Connector	View
A/C Compressor	1
A/C Condenser Fan Motor	21
A/C Pressure Switch	9
ABS Modulator-Control Unit	143
Accessory Power Socket	10
Accessory Power Socket Relay	93
Air Control Solenoid Valve	11
Air Mix Control Motor	110
Air Pump Electrical Current Sensor	145
Air Pump	12
Air Pump Relay	13
Airbag Inflator, Driver's or Passenger's	14
Alternator	84
Antenna Amplifier	45
Audio Unit	138
Auxiliary Under-hood Fuse Box	157
Back-up Light, Left or Right	15
Back-up Light Switch	16
Blower Motor	17
Blower Power Transistor	101
Brake Fluid Level Switch	18
Brake Pedal Position Switch	85
Brake/Side Marker/Taillight, Left or Right ('04-'05)	171
Brake/Taillight, Left or Right ('00-'03)	79
Cable Reel	146
CD Changer (Honda Accessory)	118
Ceiling Light/Spotlights	86
CKP Sensor	69
Clutch Interlock Switch	19
Clutch Pedal Position Switch	20
CMP Sensor A	51
CMP Sensor B	52
Combination Light Switch	127
Convertible Top Control Unit	153
Convertible Top Disable Switch (Removable Hardtop)	33
Convertible Top Motor Emergency Connector ..	41
Convertible Top Motor, Left or Right	42
Convertible Top Switch	105
Cruise Control Actuator	87
Cruise Control Main Switch	104
Cruise Control Set/Resume Switch ('00-'03) ...	94
Cruise Control Set/Resume/Cancel Switch ('04-'05)	172
Cruise Control Unit	119
DLC	128

Connector	View
Door Key Cylinder Switch, Driver's	23
Door Latch, Driver's	147
Door Lock Actuator, Passenger's	22
Door Switch, Driver's or Passenger's	2
Driver's Seat Belt Switch	24
DRL Control Unit (Canada)	120
DRL Diode (Canada)	25
ECM	150
ECT Sensor	26
ELD Unit	71
Engine Start Switch	95
EPS Control Unit	151
EPS Motor	27
EPS Torque Sensor	72
EVAP Bypass Solenoid Valve	28
EVAP Canister Purge Valve	30
EVAP Canister Vent Shut Valve	29
Evaporator Temperature Sensor	31
FTP Sensor	73
Fuel Tank Unit	96
Gauge Assembly	152
Hazard Warning Switch	116
Headlight, High Beam, Left or Right	98
Headlight, Low Beam, Left or Right	97
Headrest Speakers, Driver's or Passenger's (Honda Accessory) ('04-'05)	176
Heater Control Panel	144
High Beam Cut Relay (Canada)	100
High Horn ('02-'05)	161
High Mount Brake Light	34
HO2S, Primary	88
HO2S, Secondary	89
Horn ('00-'01)	3
Horn Switch	158
IAC Valve	74
IAT Sensor	36
IG2 Relay	93
Ignition Coils	77
Ignition Key Switch/Key Light	111
Immobilizer Receiver Unit	99
Injectors	32
Intermittent Wiper Relay ('00-'01)	100
Intermittent Wiper Relay ('02-'05)	168
Keyless Door Lock Control Unit	134
Knock Sensor	4
License Plate Light	39
Low Horn ('02-'05)	3



Connector Views

– Component Connector View Index

Connector	View
Main Under-hood Fuse/Relay Box	156
MAP Sensor	75
MES Connector	50
Mode Control Motor	112
Noise Condenser (Removable Hardtop) ('00-'01)	5
Noise Condenser ('02-'05)	164
Parking Brake Switch	6
Parking Light, Left Front or Right Front	40
Parking/Side Marker Light, Left Front or Right Front ('04-'05)	170
PGM-FI Main Relay	113
Power Mirror, Left or Right	76
Power Mirror Switch	117
Power Window Master Switch	121
Radiator Fan Motor	43
Radiator Fan Switch	44
Radio Remote Switch	106
Rear Window Defogger Change Relay ('02-'05)	165
Rear Window Defogger Diode ('02-'05)	163
Rear Window Defogger Relay ('00-'01)	155
Rear Window Defogger Relay ('02-'05)	100
Rear Window Defogger Switch (Removable Hardtop) ('00-'01)	78
Rear Window Defogger Switch ('02-'05)	166
Rear Window Defogger (Removable Hardtop)	159
Rear Window Defogger ('02-'05) (Softtop)	169
Recirculation Control Motor	114
Seat Belt Tensioner, Driver's or Passenger's ..	46
Security Control Unit (Honda Accessory)	140
Security Disarm Switch (Honda Accessory) ...	70
Security Hood Switch (Honda Accessory)	35
Security In-line Fuse 1 (Honda Accessory)	38
Security In-line Fuse 2 (Honda Accessory)	37

Connector	View
Security LED	47
Side Marker Light, Left Rear or Right Rear ('00-'03)	48
Speaker, Driver's Door or Passenger's Door ...	49
SRS Unit	135
Starter Cut Relay	155
Starter Solenoid	7
Taillight Relay	155
Test Tachometer Connector	53
TP Sensor	80
Trunk Lid Latch	81
Trunk Lid Opener Relay (Honda Accessory) ...	91
Trunk Lid Opener Switch	55
Trunk Light	54
Turn Signal Light, Left Front or Right Front ...	56
Turn Signal Light, Left Rear or Right Rear	57
Turn Signal Light, Left Side or Right Side	58
Turn Signal/Hazard Relay	155
Tweeter, Left or Right ('02-'05)	167
Under-dash Fuse/Relay Box	155
Unlock Relay, Driver's Only (Honda Accessory)	107
VSS	82
VTEC Oil Pressure Switch	59
VTEC Solenoid Valve	8
Wheel Speed Sensor, Left Front	60
Wheel Speed Sensor, Left Rear	61
Wheel Speed Sensor, Right Front	62
Wheel Speed Sensor, Right Rear	63
Window Motor, Driver's	149
Window Motor, Passenger's	148
Window Switch, Passenger's	108
Windshield Washer Motor	64
Windshield Wiper Motor	103
Wiper/Washer Switch	122
XM Receiver (USA: '04-'05)	175