

Splice and Junction Connector Details Index

Circuit		Page
Circuit 11	Interior Lights (Positive)	15
Circuit 12	Interior Lights (Negative)	15-1
Circuit 13	Brake Pedal Position	15-2
Circuit 25	Parking Brake Position	15-2
Circuit 61	Horn Relay Control	15-3
Circuit 200	Trunk Lid Position	15-3
Circuit 402	Intermittent Wiper	15-4
Circuit 702	Brake Fluid Level	15-4
Circuit D04	Power Source for ECM Control	15-5
Circuit D46	Reference Voltage for ECM Sensors	15-5
Circuit E93	Vehicle Speed Sensor Signal 1	15-6
Circuit E94	Vehicle Speed Sensor Signal 2	15-6
Circuit F28	Service Check Signal	15-6
Circuit F54	DLC Input/Output	15-7
Circuit M36	Engine Start Switch Signal	15-7
Circuit M37	Clutch Pedal Position	15-8
Circuit Z28	Ground for ECM Sensors	15-8