


Fuse/Relay Boxes

- Under-dash Fuse/Relay Box

Fuse-to-Components Index

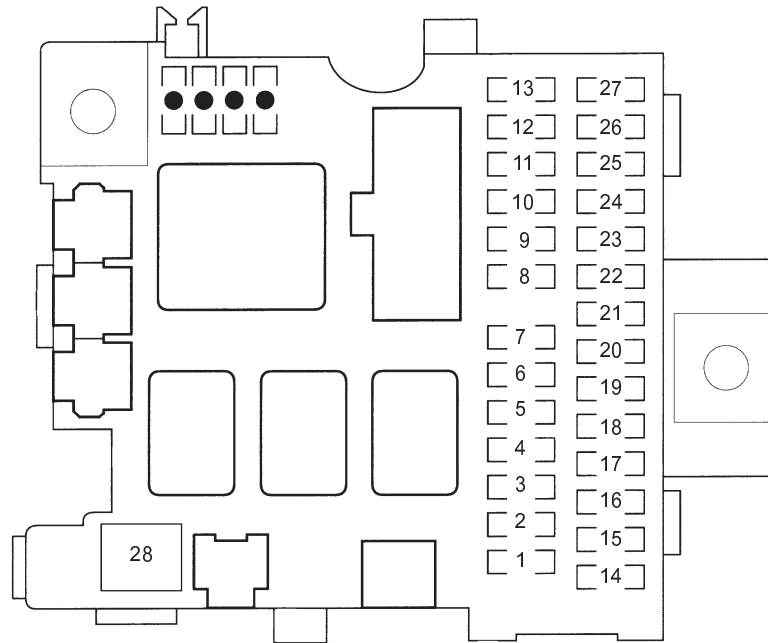


Fuse Number	Fuse Name	Amps	Page	Component or Circuit Protected
1	SRS	10	10-5	SRS unit (VA)
2	FUEL PUMP SRS	15	10-5	SRS unit (VB) Fuel pump (FP), PGM-FI main relay
3	ENGINE START	7.5	10-4	Engine start switch
4	IGN COIL	15	10-5	Ignition coils
5	BACK-UP LIGHT INSTRUMENT LIGHT	7.5	10-5	Back-up lights, Charging system light ('04-'05), Convertible top control unit, DRL indicator (Canada), EPS control unit, Gauge assembly, Keyless door lock control unit
6	ACG	15	10-6	Air control solenoid valve, Alternator, Charging system light ('00-'03), Cruise control unit, Cruise control main switch, ELD unit, EVAP bypass solenoid valve, EVAP canister purge valve, EVAP canister vent shut valve, Primary and secondary HO2S, Rear window defogger change relay ('02-'05)
7	TURN LIGHT	7.5	10-7	Hazard warning switch
8	FRONT WIPER	20	10-10	No. 12 Fuse (in the under-dash fuse/relay box), Intermittent wiper relay, Power window master switch, Windshield wiper motor
9	ACC SOCKET	10	10-4	Accessory power socket, Audio unit, Radio remote switch



Fuse/Relay Boxes

- Under-dash Fuse/Relay Box

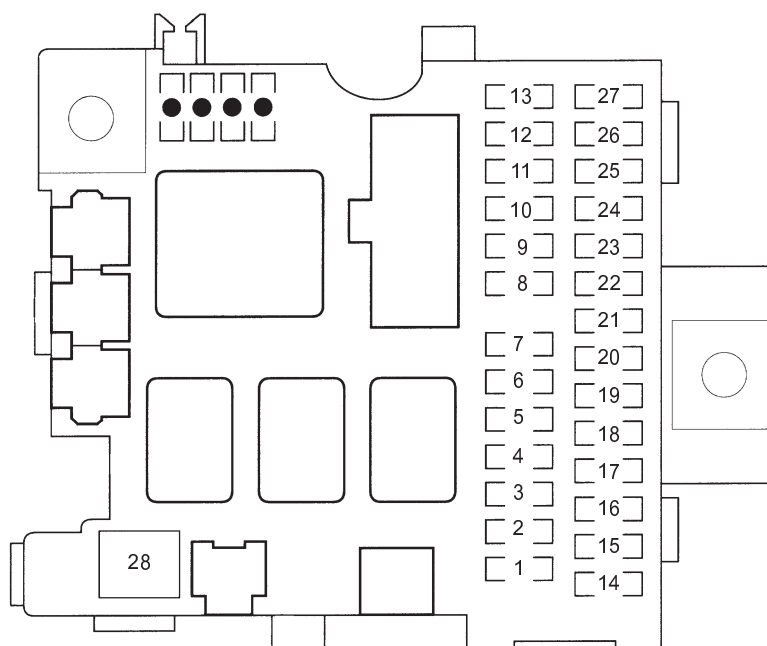


Fuse Number	Fuse Name	Amps	Page	Component or Circuit Protected
10	—	—	—	Not used
11	—	—	—	Not used
12	WASHER MOTOR	15	10-10	Convertible top switch, Wiper/washer switch
13	FR WIPER AUTO STOP SIGNAL	7.5	10-10	Intermittent wiper driving circuit (in the gauge assembly)
14	—	—	—	Not used
15	—	—	—	Not used
16	—	—	—	Not used
17	POWER WINDOW-DR	20	10-7	Power window master switch
18	POWER WINDOW-AS	20	10-7	Convertible top control unit
19	R/C MIRROR	7.5	10-8	ABS modulator-control unit, DRL control unit (Canada), Power mirror switch, Rear window defogger relay, Rear window defogger switch
20	HEATER CONTROL COOLING FAN RELAY	7.5	10-8	A/C compressor clutch relay, A/C condenser fan relay, Blower motor relay, Heater control panel, Radiator fan relay, Recirculation control motor
21	STARTER SIGNAL	7.5	10-9	ECM, PGM-FI main relay

Fuse/Relay Boxes

- Under-dash Fuse/Relay Box

Fuse-to-Components Index

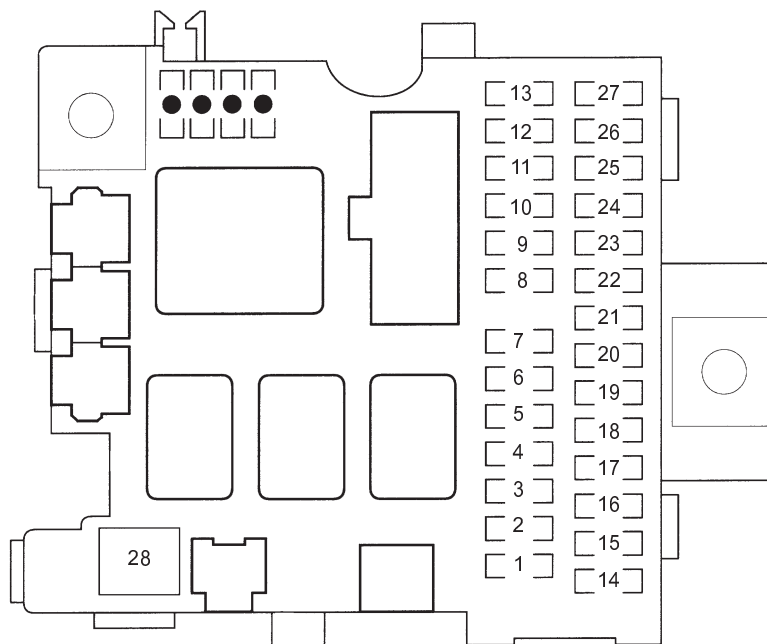

Fuse Number	Fuse Name	Amps	Page	Component or Circuit Protected
22	RADIO	15	10-9	Audio unit
23	SMALL LIGHT	10	10-9	Taillight relay
24	INTERIOR LIGHT	7.5	10-9	Ceiling lights/spotlights, Trunk light
25	BACK-UP	7.5	10-9	Audio unit (USA: '04-'05), Convertible top control unit, ECM, Gauge assembly, Heater control panel, Immobilizer system indicator, XM receiver (USA: '04-'05)
26	KEYLESS	15	10-9	Keyless door lock control unit, Trunk lid opener switch
27	(RUNNING LIGHT)	10	10-9	DRL control unit (Canada)
28	—	—	—	Not used