


Connector Terminal Views

129. C101

- Light Blue
- Behind left kick panel
- Connects engine wire harness to dashboard wire harness A

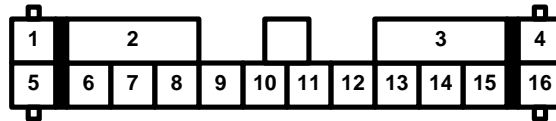

- | | |
|---|--|
| 1 BLK/YEL (Fuse 4) | 10 WHT/RED (Fuse 25) |
| 2 Male – BLK/RED | 11 YEL (Fuse 5) |
| Female – BLU/RED | 12 Male – GRN/YEL |
| (HVAC) | Female – GRN/BLK |
| 3 BLK/WHT (Starting system) | (Back-up lights) |
| 4 YEL/BLK (Circuit D04) | 13 WHT/BLK (Pulsed secondary air injection system) |
| 5 BLK/YEL (Fuse 6) | 14 BLK (G101) |
| 6 YEL/BLU (Circuit D46) | 15 Male – BRN/YEL |
| 7 WHT/BLU (Charging system) | Female – BRN |
| 8 BLU/WHT (Circuit E94) | (G101) |
| 9 YEL/RED | 16 Male – GRN/YEL |
| '00-'03: (Gauges and indicators) | Female – GRN |
| except '00-'03: (Gauges and indicators) | (Circuit Z28) |